## **■ COMBINER/SPLITTER**



Technology	Single microprocessor controlled high power relay		
Relay self consumption open/closed	10 mA / 600 mA	0 mA / 580 mA	
Disconnection voltage	12,8V	12,8V	
Connection / reconnection	13,4V	+APC/86 terminal active	
Connection delay	10 s. +/- 5%	10 s. +/- 5%	
Nominal current	160A	160A	
Peak current	500A during 1s at 23°C	500A during 1s at 23°C	
Performance	100 000 contacts	100 000 contacts	

### Connection on the vehicle or charger

Recommended cable section

System

Battery voltage

Operating voltage

Section		
1 m	6 mm <sup>2</sup>	6 mm <sup>2</sup>
2 m	10 mm <sup>2</sup>	10 mm <sup>2</sup>
3 m	16 mm²	16 mm <sup>2</sup>
4 m	25 mm <sup>2</sup>	25 mm <sup>2</sup>
5 m	35 mm²	35 mm <sup>2</sup>
6 m	50 mm²	50 mm <sup>2</sup>

#### Mechanical characteristics

International protection rating	IP53	IP53	
Plastic material	PA66 - GF30	PA66 - GF30	
Battery connectors	M6 copper connector	M6 copper connector	
Other terminals	Faston 6,3 x 0,8	Faston 6,3 x 0,8	
Operating temperature	-40°C - + 85°C	-40°C - + 85°C	
Dimensions in mm (wxhxd)	77x46x16 mm	77x46x16 mm	
Weight	300 g	300 g	
Warranty			
Period	2 years	2 years	




## Isolator/ combiner fuse protection kit

Protects your installation and your battery against malfunctions (short circuit, battery fault, overcurrent ...).


Included: fuse and fuse holder (150A x2 + 5A x1)



## **USE WITH VEHICLE** WITH ALTERNATOR

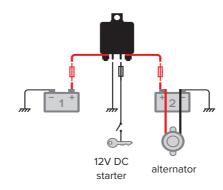

## I OFF-GRID USE

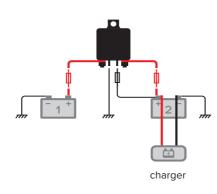

# **MONO-BLOCK RELAY OF HIGH POWER**



Unlike low cost combiner which integrates 2 low power relays in parallel, UNISPLIT has a high power mono-block relay thus avoiding all synchronization risks, for more reliability.

# UNISPLIT combiner/splitter

# PERFORMANCE & **ROBUSTNESS**

UNISPLIT is the ideal combiner/separator for your applications on vehicles, boats or isolated sites.

Equipped with a high power monobloc relay (160A), UNISPLIT 160.12 has been developed to guarantee optimum operation on most alternators, even those of the most recent vehicles with a charging current greater than 120A.

#### UNISPLIT thus allows:


- to charge an entire battery bank as soon as a load (alternator, charger...) is detected on the main battery by coupling the batteries
- to avoid self-discharge by disconnecting them as soon as the charge is stopped

For applications on vehicles, thanks to its

(technology not adapted for this use).

Save Batt. UNISPLIT couples the batteries only after the starting

UNISPLIT thus avoids all the important current calls of the starter (>500A during several seconds) that are harmful to the separator-couplers and service batteries

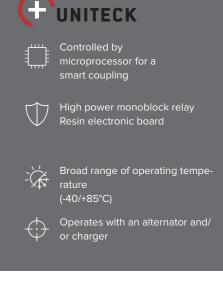

G



Quality guaranteed by Uniteck, Packaged in France



Standards				
	Euro 1 - 5	Euro 6 +		
	(Vehicle < 15 sept 2015)	(Vehicle < 15 sept 2015)		
Operation Alternator	Always ON if engine on	Intermittently if the engine is on: -After starting up until partial charge (14.2 V - 14.6 V very punctually) -If battery 1 is about 50% discharged -During braking or deceleration phases		
Alternator charging voltage alternator	14,2 - 14,6 V	Depending on the case 14,2 - 14,6 V very punctual and not in the duration, otherwise 12,4 - 12,8 V		
Uniteck combiner	UNISPLIT 160.12	UNISPLIT 160.12 EURO 6		

NEW